



BUTTONS	FUNCTIONALITY
A	A trap release in manual mode; Preset of trap A in microphone mode
B	B trap release in manual mode; Preset of trap B in microphone mode
C	C trap release in manual mode; Preset of trap C in microphone mode
D	D trap release in manual mode; Preset of trap D in microphone mode
E	E trap release in manual mode; Preset of trap E in microphone mode
F	F trap release in manual mode; Preset of trap F in microphone mode
G	Station forward (next to the right)
H	Change modes: - Microphone mode — singles only - Microphone mode — Sim.Double - Microphone mode — Double on Rep. - Manual mode — Direct release with A..F



BUTTONS	FUNCTIONALITY
A	High house release in manual mode; Preset of High house in microphone mode
B	Low house release in manual mode; Preset of Low house in microphone mode
C	Double release in manual mode; Preset of Double in microphone mode
D	-
E	Timer (0-3 sec) on/off
F	Activate manual mode or microphone mode (switch off/on microphone)
G	Station forward (move to the right)
H	Station back (move to the left)



BUTTONS	FUNCTIONALITY
A	Right trap release in manual mode; Preset of Right trap in microphone mode
B	Center trap release in manual mode; Preset of Center trap in microphone mode
C	Left trap release in manual mode; Preset of Left trap in microphone mode
D	Random trap release in manual or microphone mode
E	Timer (0-1 sec) on/off
F	Activate manual mode or microphone mode (switch off/on microphone)
G	Station forward (move to the right)
H	Station back (move to the left)